

## PROBLEM SYMPTOMS TABLE


### HINT:

Proceed to the troubleshooting for each circuit in the table below.

Symptom	Suspected area	See page
The SRS warning light goes off after the primary check, but comes on again.	SRS Warning Light Remains ON	<a href="#">RS-229</a>
With the ignition switch on, the SRS warning light sometimes comes on after approximately 6 seconds.	SRS Warning Light Remains ON	<a href="#">RS-229</a>
The SRS warning light always comes on even when no DTSs are output.	SRS Warning Light Remains ON	<a href="#">RS-229</a>
With the ignition switch on, the SRS warning light does not come on.	SRS Warning Light does not Come On	<a href="#">RS-234</a>
Although an SRS warning light operates normally, DTC or a normal system code is not displayed.	TC and CG Terminal Circuit	<a href="#">RS-238</a>
Although terminals TC and CG of the DLC3 are not connected, DTC or a normal system code is displayed.	TC and CG Terminal Circuit	<a href="#">RS-238</a>

## TERMINALS OF ECU

### Center Airbag Sensor Assembly:

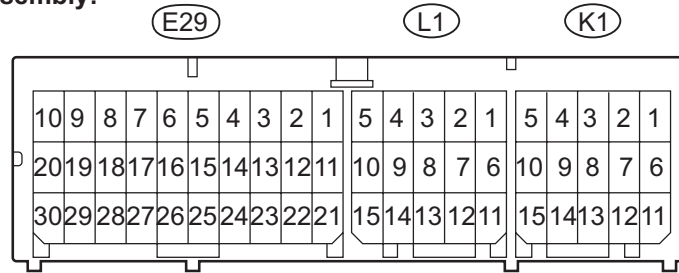

H

C108107E03

Terminal No.	Terminal Symbol	Destination
E29-1	P2+	Front passenger airbag (Front passenger side squib 2nd step)
E29-2	P2-	Front passenger airbag (Front passenger side squib 2nd step)
E29-3	P-	Front passenger airbag (Front passenger side squib)
E29-4	P+	Front passenger airbag (Front passenger side squib)
E29-5	D+	Steering pad (Driver side squib)
E29-6	D-	Steering pad (Driver side squib)
E29-7	D2-	Steering pad (Driver side squib 2nd step)
E29-8	D2+	Steering pad (Driver side squib 2nd step)
E29-11	LA	SRS warning light (Combination meter)
E29-12	TC	DLC3
E29-13	PBEW	Front passenger seat belt warning light
E29-16	SIL	DLC3
E29-17	P-AB	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E29-21	IG2	IGN fuse
E29-22	GSW2	ECM
E29-23	PAON	Front passenger seat belt warning light (Passenger airbag ON/OFF indicator)
E29-25	E1	Ground
E29-26	E2	Ground
E29-27	-SR	Front airbag sensor RH
E29-28	-SL	Front airbag sensor LH
E29-29	+SR	Front airbag sensor RH
E29-30	+SL	Front airbag sensor LH
L1-1	PD-	Front seat outer belt assembly LH (Driver side pretensioner squib)
L1-2	PD+	Front seat outer belt assembly LH (Driver side pretensioner squib)
L1-6	ICD-	Curtain shield airbag assembly LH (Driver side curtain shield squib)
L1-7	ICD+	Curtain shield airbag assembly LH (Driver side curtain shield squib)
L1-8	BBD+	Side airbag sensor LH
L1-9	SFD+	Front seat side airbag assembly LH (Side squib LH)
L1-10	SFD-	Front seat side airbag assembly LH (Side squib LH)
L1-11	DBE+	Front seat inner belt assembly LH
L1-12	DBE-	Front seat inner belt assembly LH
L1-13	DSP-	Seat position sensor
L1-14	DSP+	Seat position sensor
L1-15	BBD-	Side airbag sensor LH
K1-4	PP+	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
K1-5	PP-	Front seat outer belt assembly RH (Front passenger side pretensioner squib RH)
K1-6	SFP-	Front seat side airbag assembly RH (Side squib RH)